

		<b>Syntech Solutions Ltd</b>	
<b>Company</b>		<b>Device</b>	
		<b>Remote Access VPN Solution</b>	
<b>Details</b>			
Issue Date	<b>16/06/2016</b>	Reference	<b>N/A</b>

<b>'Three' SIM Card Mobile Number</b>	<b>SIM Card Serial Number</b>
007414957150	8944200102868045959
<b>Addressing Description</b>	
<b>Setting</b>	
PI2 VPN Server Physical Address	192.168.80.240
PI2 VPN Server DHCP Virtual Address	192.168.80.241
DHCP Assigned Client Address Range	192.168.80.242-245
Subnet Mask	255.255.255.0
<b>VPN Client Connection</b>	
<b>Setting</b>	
VPN Server Host Name(*)	*****.vpnazure.net
Username(*)	****
Password(*)	*****
Security Protocol	Allow 'Unencrypted Password'
<b>Raspberry PI2 Details</b>	
<b>Setting</b>	
Root username	<b>pi</b>
Password	bms12345

### How to Setup (Windows 10)

- On the windows start menu type in 'VPN'
- Select 'Change virtual private networks (VPN)'
- Select 'Add a VPN Connection'
- VPN Provider = Windows Built-In
- Connection Name = BMS Site VPN (this can be anything you like)
- Server Name(\*)- \*\*\*\*\*.vpnazure.net
- VPN Type = Automatic
- Type Of sign-in info = Username and password
- Username(\*) = \*\*\*\*
- Password(\*) = \*\*\*\*\*
- Press Save
- On the windows start menu type in 'Network Connections'
- Select 'View Network Connections'
- Right click on 'BMS Site VPN or your chosen name'
- Select properties
- Select tab 'Security'
- Select 'Allow these protocols'
- Tick 'Unencrypted password' (PAP)
- Press Ok
- Double click on the 'BMS Site VPN' Network connection.
- Click On 'BMS Site VPN' and Connect
- Once connected the server will assign you an IP address

\* - Details shown on the device.

### Local Network Remote Desktop

It is possible to locally remote into the PI i.e. laptop connected to PI via CAT5 cable or via hub

To connect do the following

- Click on windows start
- In search bar type 'mstsc'
- Open 'Remote Desktop Connection'
- Once app is open type in for
  - 'Computer: 192.168.80.240 (VPN Physical address)
  - Username = pi
  - Password = bms12345

### 3G Dongles Setting

If you need to change the SIM card settings you will need to insert the dongle into a laptop, all settings can be accessed via the web page which defaults to <http://192.168.8.1/>

U: admin  
P: Syntech8000!