




1. Run downloader

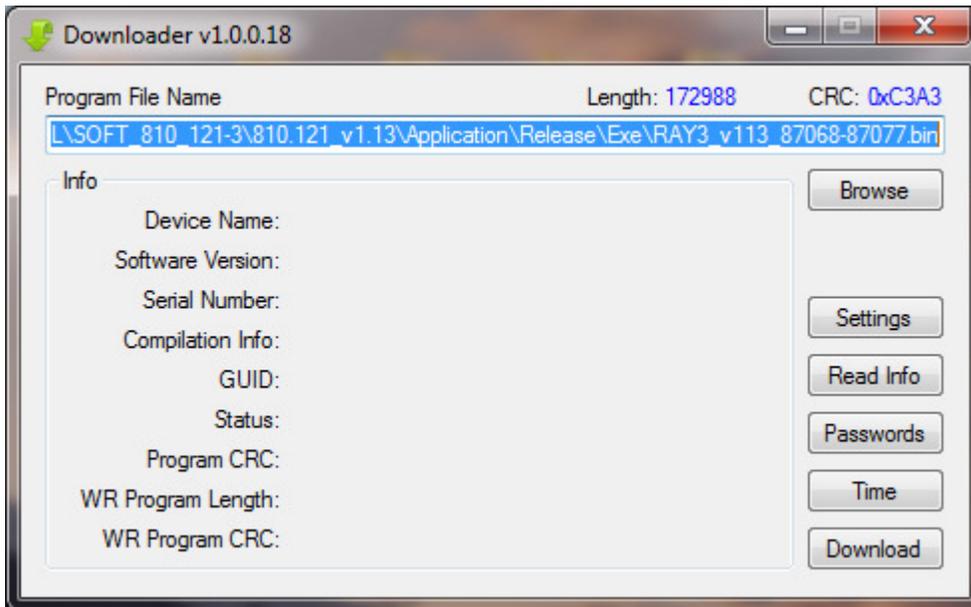

2. Click "Browse" and select firmware bin file.
3. Click "Settings", select communication parameters. For "Serial" communication use Modbus address 254, for "Ethernet" - 255

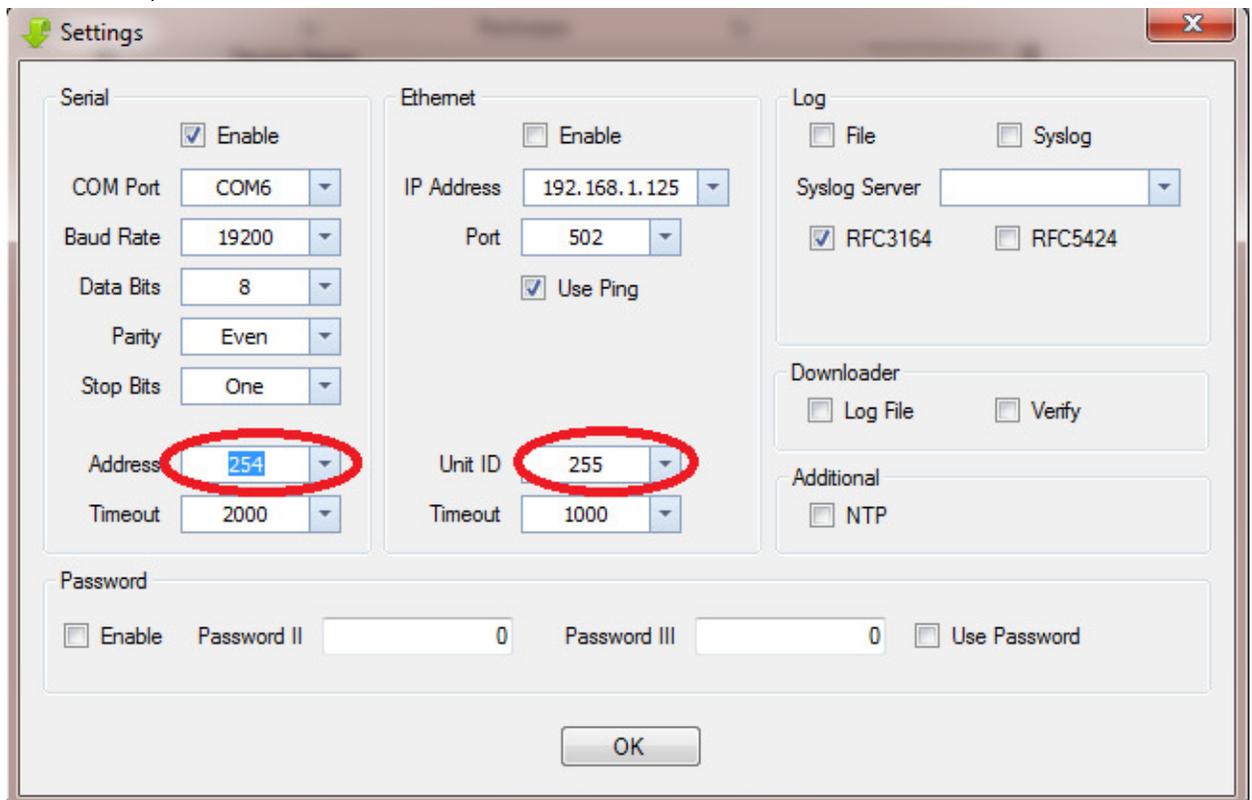

- Click "Read info", if communication ok reads device description. If you have problems reading description, review communication settings.

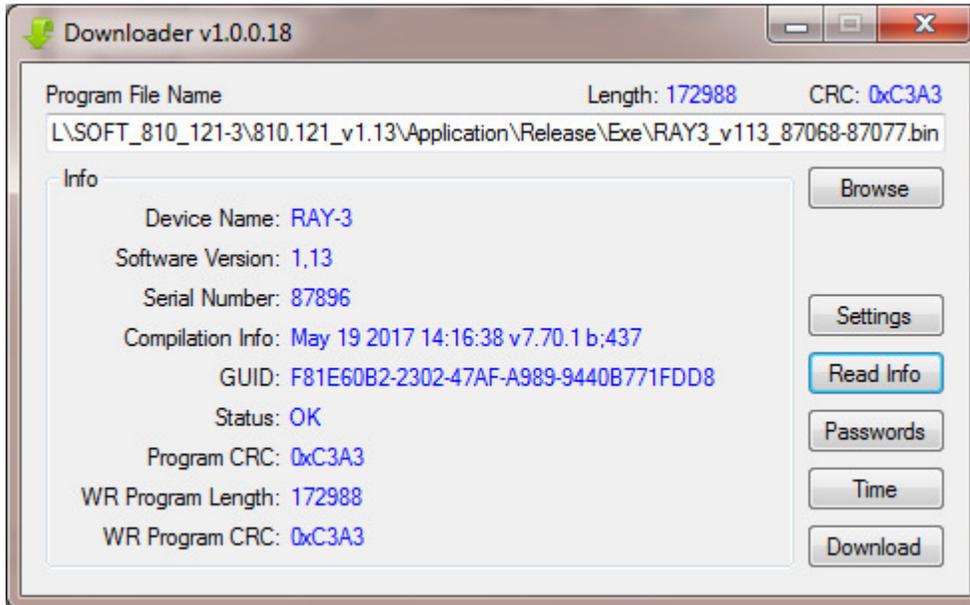

- Click "Download" to start program device. After download ends close program window, and click "Read info" to check firmware update was successful.

